



1. Turn off corp stop.
2. Cut existing copper pipe 12" from corp stop, loosen and remove flare nut, remove and discard copper pipe.
3. Insert a copper disc #6125 into flare nut, reconnect and tighten as necessary to seal.
4. If corp leaks slightly, gently tighten bottom nut to seal.

REVISION	APPROVED	DATE	CITY OF COEUR d'ALENE STANDARD DRAWING	APPROVED BY:
			SERVICE ABANDONED AT CORP STOP - COPPER	<i>Chris Boddy</i> CITY ENGINEER, PE 10804
				4/13/18 DATE:
				DWG NO. W-40